

 
# USER MANUAL

Alpha-Numeric Display Pager

MODEL: AL-924e

Control Buttons .....	1
Features and Functions .....	2-3
LCD Display .....	4
Function Operation.....	5-20
Reading a Message .....	5
Locking Message .....	6
Unlocking Message .....	7
Deleting .....	8
Deleting All .....	9
Add to Personal Memo .....	10
Setting Alert .....	11
Pager On / Off .....	13
Setting Auto Sleep .....	14
Setting Alarm .....	15
Setting Time And Date .....	16
Setting Scroll .....	17
Setting Zoom In Or Zoom Out .....	19
Reading The Mail Drop .....	20
Moving The Cursor .....	21
Reading The Personal Message.....	22
Reading The Full Message .....	23
Backlighting / Duplicate .....	24
Error Message / Battery Gauge .....	25
Set Mail Drop Alert .....	26

## Control Buttons

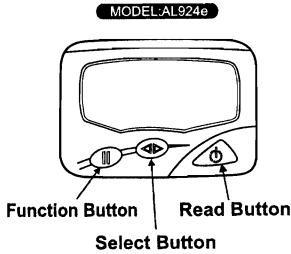


- |  |  |  |
|--|--|--|
| <p><b>⏻ Read Button</b></p> <ul style="list-style-type: none"> <li>- to read message</li> <li>- to turn on back-light</li> <li>- to turn on power</li> <li>- to activate the function</li> </ul> | <p><b>⬅️➡️ Select Button</b></p> <ul style="list-style-type: none"> <li>- to move the cursor</li> <li>- to read message by cycles</li> </ul> | <p><b>⏸️ Function Button</b></p> <ul style="list-style-type: none"> <li>- to display the function menu</li> <li>- to adjust the time and date change</li> <li>- to enable the function mode</li> </ul> |
|--|--|--|

## Features and Functions

 - ♦ 4-Line , 84 English Alpha Character Memory
- ♦ Easy-To-Read Back-Lit Display
- ♦ Up To Memory Capacity 32,000 Characters.
- ♦ 16 Memory Slots + Message Full 10 sets
- ♦ Personal Message Memory : 20 sets , Mail Drop Available
- ♦ Show Time Of Day And Date
- ♦ User Selectable 12 / 24 Hour Clock
- ♦ Message Date And Time Stamping
- ♦ Incomplete Message-In Indication
- ♦ Duplicate Message Indicator
- ♦ Locks Important Message (Up To 10 Sets)
- ♦ All Or Individual Message Delete
- ♦ Unread Message Indicator , Reminder Alert

- ♦ Low Battery Alert , Low Battery Indicator
- ♦ Zoom The Display - To Enlarge Message For Easy Read ability
- ♦ Message Full Indication , Message Full Auto Storage
- ♦ Message Preview For A Quick Look At Each Message
- ♦ Message Move to Memo ( User selectable )
- ♦ Service Area Indication
- ♦ 5 Built-In Alarm Clock
- ♦ 4 Beep Alerts / Silent Vibration / Silent then Beep / 8 Musical / Sleep Mode
- ♦ Private Time - For The Ability To Turn Off All Pager Alerts During Pre-Selected Times
- ♦ Mail Drop Alerts
- ♦ Save Message When Off And When Changing Battery

## LCD Display






Pager Status Symbols	Message Status Symbols	Function Menu Symbols
⏻ POWER ON INDICATOR	▲ MESSAGE IN MEMORY	⬆️ UP OR ESCAPE
🎵 MUSIC ALERT	🔒 MESSAGE SELECTING	📢 SET ALERT
📢 BEEP ALERT	🔒 MESSAGE LOCK IN MEMORY	📴 PAGER OFF
🕒 AUTO SLEEP INDICATOR	🔒 MESSAGE LOCK SELECTING	🕒 SET AUTO SLEEP
📢 ALARM INDICATOR	👤 PERSONAL MESSAGE	📢 SET ALARM
📄 AUTO SCROLL INDICATOR	✓ FULL MESSAGE	⌚ SET TIME
🔋 BATTERY CAPACITY	👤 PERSONAL MESSAGE SELECTING	📄 SET SCROLL
📄 OUT OF RANGE INDICATOR	⏸️ FULL MESSAGE SELECTING	🔍 ZOOM IN / ZOOM OUT
📄 ERROR MESSAGE	📄 MAILDROP IN MEMORY	🔒 MESSAGE LOCK
📄 DUPLICATE MESSAGE	📄 MAILDROP SELECTING	🗑️ MESSAGE DELETE
📄 MAIL DROP MESSAGE		🗑️ DELETE ALL
👤 MEMO MESSAGE INDICATOR		👤 MOVE TO MEMO
		📢 MAIL DROP ALERT

### Receiving And Reading Your Message

  
 
- \* A flashing indicates you have a message has not been read. (The symbol of mail drop shows on screen by flashing).
- \* Press once, to preview the message.
- \* Press , to display your message., Press once, to view the next screen.

★ If you have set " Auto Scroll " , your pager will scroll through your message screen by screen automatically .






### Locking Messages

  - \* Press , to move the cursor to the desired flashing symbol.
- \* Press , press once to select the desired message to lock.
- \* Press , to lock the message. .
- \* The symbol is displayed , indicating the status of the message in memory.






### Unlocking Messages

   - \* Press , to move the cursor to select the message to unlock.
- \* Press , then , press once, to " MESSAGE UNLOCK " Mode.
- \* Press , to unlock the message.






### Deleting Messages

   - \* Press , to move the cursor to select the message you desire. Press to read the message.
- \* Press , press once, to display " MESSAGE DELETE " Mode.
- \* When " MESSAGE DELETE ? " is displayed on the screen , press to delete the message.







### Deleting All Messages

   - ( All unlocked and read messages )
- \* Press , press again , to " DELETE ALL " Mode .
  - \* When " DELETE ALL ? " is displayed , Press , all unlocked and read messages are now deleted.



### Move Message To Memo

    
- \* Press , to move the cursor to the desired storing message. Press to read the message.
- \* Press , and press once, to move to " MOVE TO MEMO "
- \* Press , to move the flashing icon message automatically into your personal mail .






### Setting Scroll

 - \* Press **◀▶** to activate the function.
- \* When the Auto scroll is set, the **☐** symbol is displayed on screen.

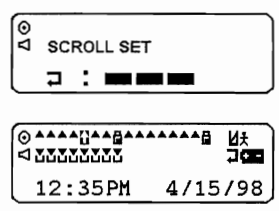

### Setting Scroll

 - \* Press **||**, then , press **◀▶**, to " SET SCROLL " Mode .
- \* Press **||**, to enable scroll automatically.
- \* Press **||**, to select the speeding of scroll.
  - (1) **■** -- slow.
  - (2) **■■** -- normal.
  - (3) **■■■** -- rapid.
  - (4) **X** -- off

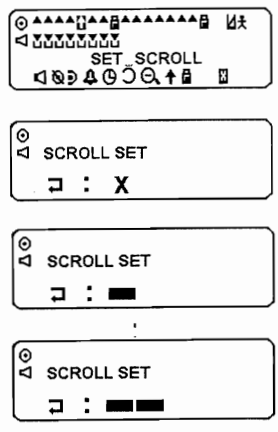

### Reading Mail Drop

- \* Press **||** twice , to move the flashing icon in the second row.
- \* Press **⏏**, to read message or press **◀▶**, to move the icon to the desired Mail drop.
- \* The features allows 15 sets Mail Drop



 
### Setting Zoom In / Zoom Out

- \* Press **||**, then press **◀▶**, to "ZOOM IN".(symble **⊗** ), Then, press **||** to confirm..
- \* The letters on screen enlarge and become two lines to read.
- \* Or press **◀▶** to move the cursor again to " ZOOM OUT " (symble **⊗** ), and press **||** to complete.
- \* The letters on screen change to four lines to read.




### Reading Personal Message

- \* Press **◀▶**, to move the flashing icon to the **⌘** symbol.
- \* Press **⏏**, to read message.
- \* When the **⌘** symbol is shown in the top left-hand corner of the display , indicates the message status as a personal message.

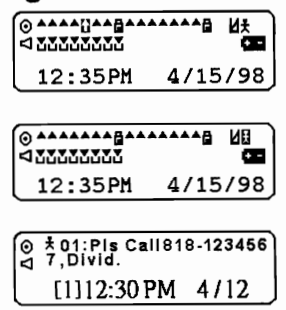




### Moving the Cursor

 - \* Press **◀▶** to move cursor to the **⏏** icon flashes, indicating the present position of the message you are going to read.
- \* Press **||**, the screen shows " UP OR ESCAPE ".
- \* Press **||** once, the flashing icon can be move to the top row or the second row.,such like "MAIL DROP AREA" or "MESSAGE AREA".
- \* Press **||**, the pager returns to standby mode.

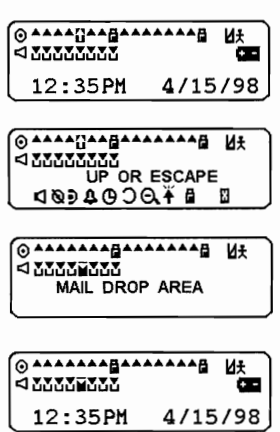

### Reading Full Message

   - \* Press **◀▶**, to move the flashing icon to the **⏏** symbol.
- \* Press **⏏**, to read message.
- \* When the **⏏** symbol is shown in the top left-hand corner of the display, indicates the message status as a full message.




### Backlighting

You can manually activate the back-lit at any time by pressing and holding **⏏** for three seconds. If no other buttons are pressed, the back-lit automatically turns off when the pager returns to the standby mode.


### Duplicate Message

 The pager automatically covers by the latest messages if it is received the same message. The **⏏** symbol is shown in the top left-hand corner of the display, indicates the message status as a "Duplicate Message".





### Error Message

 If it is received the error message. The **⏏** symbol is shown in the top left-hand corner of the display, indicates the message status as a Error message.







### Battery Gauge

  The battery indicator is located on the status screen and keeps you informed of battery energy level. The three indicators range from **■** (full), **■** (1/2), **■** (low). Whenever the low battery shows on display, Please replace the new battery in to make sure the pager is in receivable condition.



### Set Mail Drop Alert

    - \* To move the cursor to the Mail Drop.
- \* Press **||**, to display the function menu.
- \* Press **▶**, to move the cursor to set mail drop alert ( **♪** ).
- \* Press **||**, to activate the function. Or press **⏏**, to exit



### RADIO DEVICES FOR USE IN HAZARDOUS LOCATIONS

Apollo paging receivers, model number AL-924 is suitable for use in hazardous locations, Class I, Division 2, Groups A, B, C, and D when one self-contained 1.5V, "AAA" alkaline battery. Maximum Ambient - 60 °C.

UL Approval labels are attached to the AL-924 Pager to identify the unit as being UL approval for use in hazardous locations.



- \* Substitution of components may impair suitability for Class I, Division 2.
- \* Do not disconnect or change battery unless the area is known to be Non-Hazardous. Contact sparking may occur while installing or removing accessories and cause an explosion or fire.
- \* Do not disassemble a UL Approval Product unit in any way that exposes the internal electrical circuits of the unit.
- \* Do not operate a UL Approval Product in a hazardous atmosphere. If it has been physically damaged ( for example, cracked housing). An explosion or fire may result.