

set the hour and flash the minutes. Press **⏪** to go forward 1 minute at a time or press and hold to rapid scroll. Press **⏩** to set the minutes and flash the a.m./p.m. indicator. Press **⏪** to change between "A" for a.m. and "P" for p.m. Press **⏩** to select the a.m./p.m. indicator and return your pager to the standby mode.

At the desired time, the alarm will sound and "ALARM" will appear on the display. Press **⏩** to stop the audible alert.

If the alarm is turned on, it will beep even if the pager is turned off.

Turning the Time Stamp On and Off :

- From the standby mode, press and hold **⏪** until "CLEAR ALL?" or "ALARM SET" is displayed. Repeatedly press **⏩** until "STAMP SET" is displayed. Press **⏪** to display "STAMP OFF/ON" and press **⏩** to change between OFF and ON. Press **⏩** to select "STAMP OFF/ON" and return your pager to the standby mode.

Canned Message Operation :

- Your pager is capable of displaying nine preprogrammed alpha-numeric messages. The codes to activate these messages should be given to people who page you frequently.
- To send canned messages : Dial your pager in the normal manner, then enter only the 3 digit Code

No. from the chart below. End your call in the normal manner.

Code No.	MESSAGE	Code No.	MESSAGE
110	CALL HOME URGENT	115	CALL T-A-S NOT URGENT
111	CALL HOME NOT URGENT	116	PAGE ME W-TEL NO.
112	CALL OFFICE URGENT	118	CALL BOSS URGENT
113	CALL OFFICE NOT URGENT	119	CALL BOSS NOT URGENT
114	CALL T-A-S URGENT		

Turning Your Pager Off :

- Press and hold **⏪** until the time of day flashes. While flashing, press **⏩** to turn your pager off.

Battery Information :

- Your pager is designed to operate with a "AAA" size alkaline battery.
- We recommend **Energizer** brand batteries #E92, size "AAA". See Figure C for battery replacement and polarity information.

Be sure to turn your pager off before removing the battery to ensure the current time is saved in memory.

Other Pager Features :

- When the battery is approaching the end of its life, a low battery alert occurs with "LO CELL" and **⏪** appearing on the display.
- If the number of received messages equals the

maximum allowable number, "INFO FULL" will appear on the display. When the memory is full, a new incoming message will overwrite the oldest unprotected message.

- When the pager receives a call with no message associated, "TONE ONLY" will appear on the display.
- If an incomplete or error message is received, "--" will appear at the end of the message indicating the message is subject to errors.
- If there is one unread message in memory "CALL" will appear on the display. If there are more than one unread messages in memory "CALLS" will be displayed.


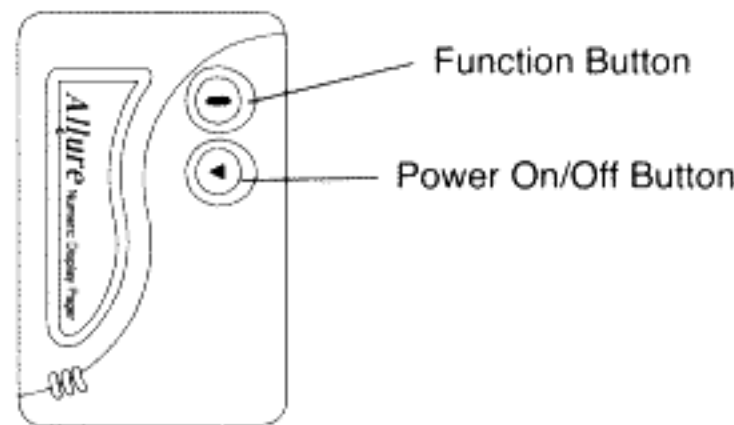


Figure A.

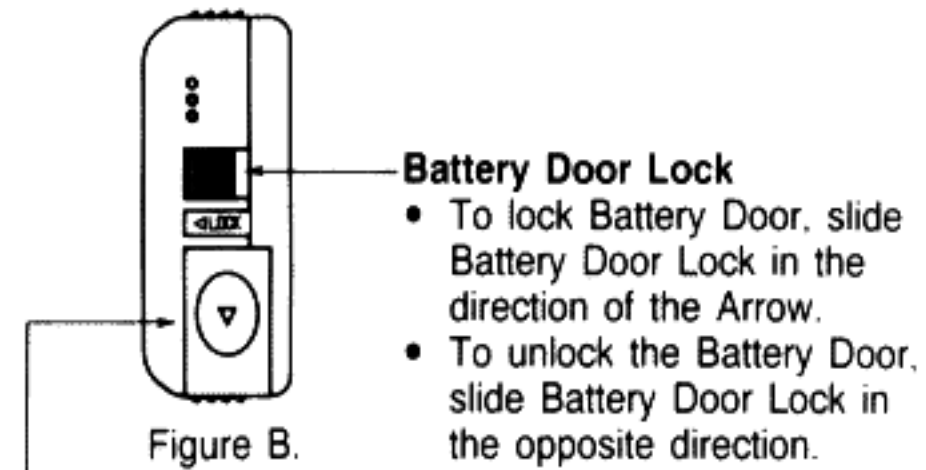

Battery Door Lock

- To lock Battery Door, slide Battery Door Lock in the direction of the Arrow.
- To unlock the Battery Door, slide Battery Door Lock in the opposite direction.

Figure B.

Battery Door

- Slide Battery Door in the direction of the Arrow to open. Please see Figure C for proper battery installation.
- Close Battery Door and slide it in the opposite direction of the Arrow.


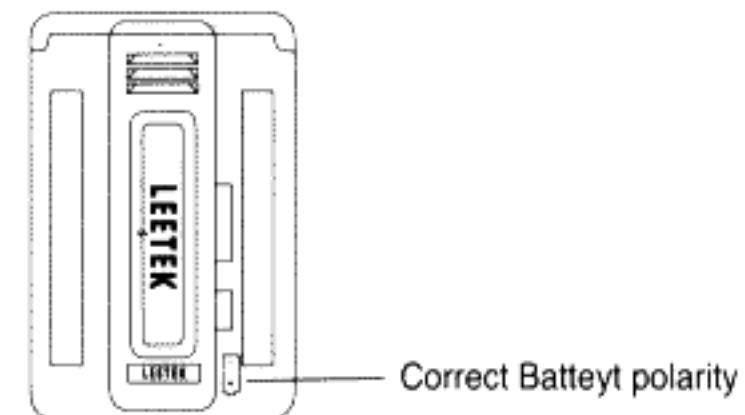



Figure C.

ZOOM COMMUNICATIONS


Allure NUMERIC DISPLAY PAGER

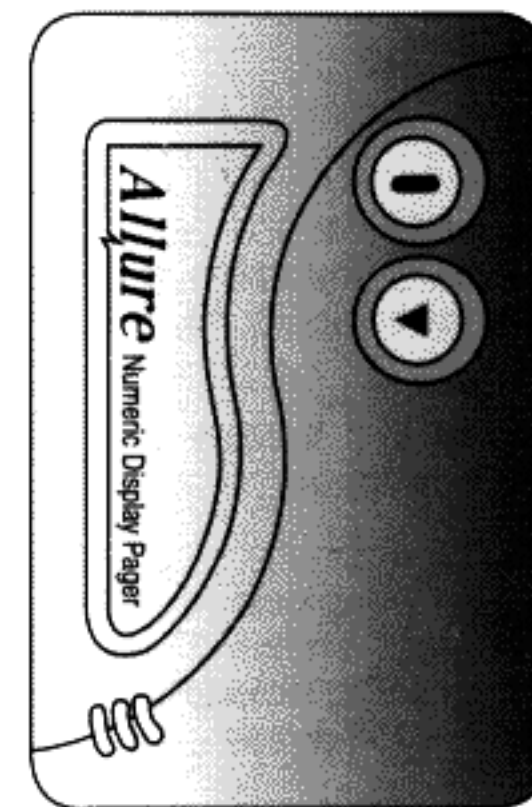


LCD DISPLAY :

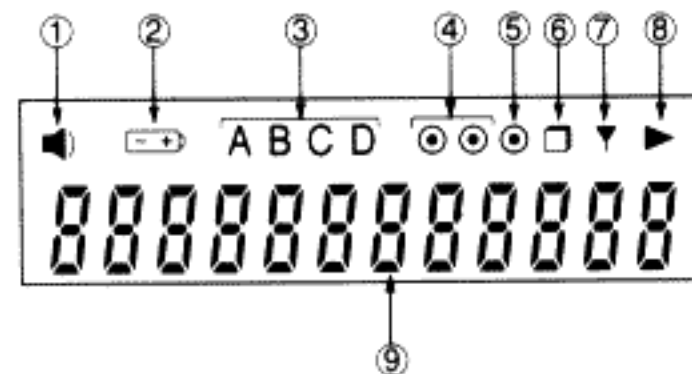

1. Alert Mode Indicator :

The  symbol indicates that the pager is in the "Beep" mode.



2. Low Battery Indicator :

The  symbol indicates that the battery is approaching the end of its life.


3. Function Indicator :

The letters A,B,C,D indicate the function that the message is received on.


4. Address Indicator :

The  symbol will appear to indicate the message is being received on the 1st address. The  symbol will appear to indicate the message is being received on the 2nd address.


5. Saved Message Indicator :

The  symbol indicates that the message is saved in a unique "permanent" memory.


6. Duplicate message Indicator :

The  symbol indicates the incoming message received is a duplicate of an unprotected message currently in memory.


7. Out of Range Indicator :

The  symbol indicates that your pager has not received any paging signal in over 30 minutes (not available on all Paging Systems).


8. Continued Message Indicator :

The  symbol indicates that the received message is longer than 12 characters.

9. 12 Character 7 Segment Display :

The  characters are used to display ALL messages.



Turning Your Pager On :


- Press  to turn your pager on. Your pager will beep or vibrate, depending on the current "Alert Mode" setting, and display your pager's Turn-On-Message. After the Turn-On-Message, your pager will display the time of day. Your pager is now in the "standby mode" and ready to receive messages.


Receiving and Reading Messages :

Your pager can receive up to twelve 20-character messages. In addition to these twelve, your pager can store six 20-character messages in a unique "permanent" memory.





When a message is received, your pager will automatically display that message and alert for 10 seconds.


- Press  to stop the alert and display "CALL" or "CALLS". Press  to read your messages.

NOTE : If the "STAMP" feature is on, the message will be preceded by the message time stamp information. Press  to continue reading your messages.

Messages that exceed twelve characters are continued on the next screen. An  will be displayed indicating your message exceeded twelve characters.

Protecting Messages :


- While viewing your message, press  to display "STORE?". Press  again to display "STORE 1". Note : If location 1 is currently occupied, "REPLACE 1" will be displayed. Use  to scroll through the six memory locations and return to standby option. Press  again to store your message or return to standby.



Protected messages are designated by  and cannot be overwritten by new incoming messages or lost while replacing the battery.

When all six memory locations are full any new message you wish to protect must overwrite one of the currently protected messages.

Note : "TONE ONLY" messages cannot be protected.





Clearing Unprotected Messages(All) :

- From the "standby mode", press and hold  until "CLEAR ALL?" is displayed.



- Press and hold  again until "YOU SURE?" is displayed. The display will begin to flash. While flashing, press  to erase all messages and display "ALL CLEARED".

Note : The "CLEAR ALL?" prompt will only appear if there are read, unlocked messages in memory.




Clearing Unprotected Messages(Individual) :


- While viewing a message, press and hold  until "STORE?" is displayed. Press  to display "CLEAR?". Press and hold  until "YOU SURE?" is displayed. The display will begin to flash. While flashing, press  to erase the message and display "CLEARED".

Selecting Alert Mode(Beep or Vibrate) :










- From the standby mode, choose between a "Beeping or Vibrating" alert by pressing  twice to switch the  symbol on and off. Your pager is in the vibrate mode when this symbol is not present on your display.

Setting an Audible Tone :









- To select one of the six optional tones from the standby mode, press and hold  until "CLEAR ALL?" or "ALARM SET" is displayed. Repeatedly press  until "TONE SET" is displayed. Press  to

display "TONE=1" and sample each tone. Press  to select the desired tone and return your pager to the standby mode.

Setting the Clock :

- From the standby mode, press and hold  until "CLEAR ALL?" or "ALARM SET" is displayed. Repeatedly press  until "TIME SET" is displayed. Press  to display "T-12-00P" with the hours flashing. Press  to go forward 1 hour at a time or press and hold to rapid scroll. Press  to set the hour and flash the minutes. Press  to go forward 1 minute at a time or press and hold to rapid scroll. Press  to set the minutes and flash the a.m./p.m. indicator. Press  to change between "A", for a.m. and "P", for p.m. Press  to select the a.m./p.m. indicator and return your pager to the standby mode.

Setting the Alarm :

- From the standby mode, press and hold  until "CLEAR ALL?" or "ALARM SET" is displayed. Press  to display "ALARM SET". Press  to display "ALARM OFF/ON" and press  to change between off and on. Press  to select "ALARM OFF" and return your pager to the standby mode, or press  to select "ALARM ON" and display "AL-12-00P" with the hours flashing. Press  to go forward 1 hour at a time or press and hold to rapid scroll. Press  to