

DIVA *Extra*
USER'S MANUAL **PAGER**

CONTENTS

 
1	Introduction	5
2	Controls	5
3	Function Indicators	6
4	How To operate features.....	7
	4-1. Turning Your pager off	7
	4-2. Turning the Light on	7
	4-3. Setting the time	8
	4-4. Setting the Alarm.....	9
	4-5. Setting the Pager auto Alert sound on/off.....	10
	4-6. Setting Alert	11
	4-7. Reminder mode.....	12
5	Basic features	13
	5-1. Standby Mode.....	13
	5-2. Tuning pager On	13
	5-3. Receiving and reading messages.....	14
	5-4. Setting the wake up message.....	18
	5-5. Delete received message(s).....	20
	5-6. Locking and Unlocking the Message	21
6	How to change the battery	22
7	Battery Introduction	23
8	Precaution.....	23
9	Repair and Maintenance.....	23
10	Warranty	24
11	FCC Regulation	26

1 Introduction

Congratulation on your purchase of a Diva Telecom Inc. Diva extra, the smallest pager. This pager accomplishes many up-to-date microminiaturization of electronic and wireless technology which provide maximum assurance in receiving numeric messages easily and conveniently.

2 Controls

Buttons



“Left button”

Turn the display light on, scroll through the features and set the function.



“Right button”

Read incoming messages, select the function displayed. Escape, power off, time, alarm, Auto sound On/Off, alerts, reminder chirp.

After executing any pager function described in this user's manual, your Diva extra pager automatically returns to the standby screen with a sound of chirp.

3 Function Indicators



Silent Alert - No alerts for incoming message.



Tone Alert - One of 6 selected melody alerts sound for an incoming message.



Melody Alert - One of 10 selected melody alerts sound for an incoming message.



Continuous Message-More incoming message is on the next screen



Off mode



Low battery





Duplicate Message Indicator



Protected Message Indicator




4 How to set up features

4-1. Turning Your pager off











- ① Press  until the "Pwr off?" displays.
- ② Press  for 2 seconds to turn your pager off.
- ③ The pager displays the day and time and "OFF" symbol flashes continuously.













4-2. Turning the Light on

- ① Press  to turn the light on to read the day and time of the day.
- ② Light turns on automatically when press  to read the messages between 6 P.M through 6 A.M, otherwise press  to turn the light on manually.
- ③ Light turns off automatically when pager returns to the standby screen.

4-3. Setting the time






- ① Press  button until "Time?" displays.
- ② Press  button to set time.
- ③ Press  to change the day flashes.
- ④ Press  to switch to the hour.
- ⑤ Press  to change the hour flashes.
- ⑥ Press  to switch to the first digit of the minute.
- ⑦ Press  to change the first digit of the minute flashes.
- ⑧ Press  to switch to the second digit of the minute.
- ⑨ Press  to change the second digit of the minute flashes.
- ⑩ Press  to return to the standby mode with a sound of chirp.




4-4. Setting the Alarm

- ① Press  button until "Alarm?" displays.
- ② Press  button to set alarm.
- ③ Press  to change the hour flashes.
- ④ Press  to switch to the first digit of the minute.
- ⑤ Press  to change the first digit of the minute flashes.
- ⑥ Press  to switch to the second digit of the minute.
- ⑦ Press  to change the second digit of the minute flashes.
- ⑧ Press  turn alarm disable/Enable Mode.
- ⑨ Press  to select to turn alarm Disable/Enable.
- ⑩ Press  to return to the standby mode with a sound of chirp.



4-5. Setting the Pager auto Alert sound on/off

This feature is designed for user to receive the message silently without any alert sound or vibration for incoming message during the certain hours of the day to ensure the best rest without missing important messages.



- ① Press  button until "PGr AUto?" displays
- ② Press  button to set Pager auto alert sound On/Off
- ③ Press  to change the first pair of the hour flashes which indicates the hour that starts to receive the message with selected alert sound.
- ④ Press  to switch to the second pair of the hour
- ⑤ Press  to change the second pair of the hour flashes which starts to receive the message silently without chirp or vibration.

- ⑥ Press  to turn the pager auto alert sound feature disable/Enable Mode
- ⑦ Press  to select to turn the pager auto alert sound feature disable/Enable
- ⑧ Press  to return to the standby mode with a sound of chirp.
- ⑨ SL means sleep mode which enables the feature
- ⑩ dl mean disable mode which disables the feature

4-6. Setting Alert

- ① Press  button until "Alert?" displays
- ② Press  button to set alert





 
- ③ Press  to scroll the choice of alerts
- ④ Press  to choose the desired alert and returns to the standby mode with a sound of chirp.


Pager returns to the standby mode without a sound of chirp when either silent or a vibration mode is selected.

4-7. Reminder mode

This feature is designed for the certain users who prefer to have reminder alert for unread messages.

- ① Press  button until "Reminder?" displays
- ② Press  button to select reminder mode enable or disable

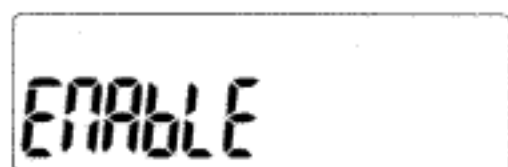




- ③ Press  to choose the desired mode and returns to the standby mode.

5 Basic features


5-1. Standby Mode

When power up pager, pager displays the day of the week, the time of the day, a symbol for selected alert of your choice, and a symbol of service area indicator.

 Note: While you are reading the message, you can return to the standby mode any time by pressing the  button and  button simultaneously.

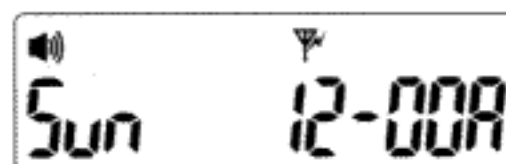





5-2. Turning pager On

 
Press  button for two seconds to turn the pager to the standby mode from Off mode. Pager displays wake up message, if you're programmed, while sound two different tone alerts. After displaying the power screen, the time of the day, the day of the week, an alert indicator and service area indicator are shown.




* Press any button to stop the alert to return to the standby screen instantly.


5-3. Receiving and reading messages


Diva extra pager can receive up to 20 sixteen character message. When a message is received, the pager alerts for 8 seconds.

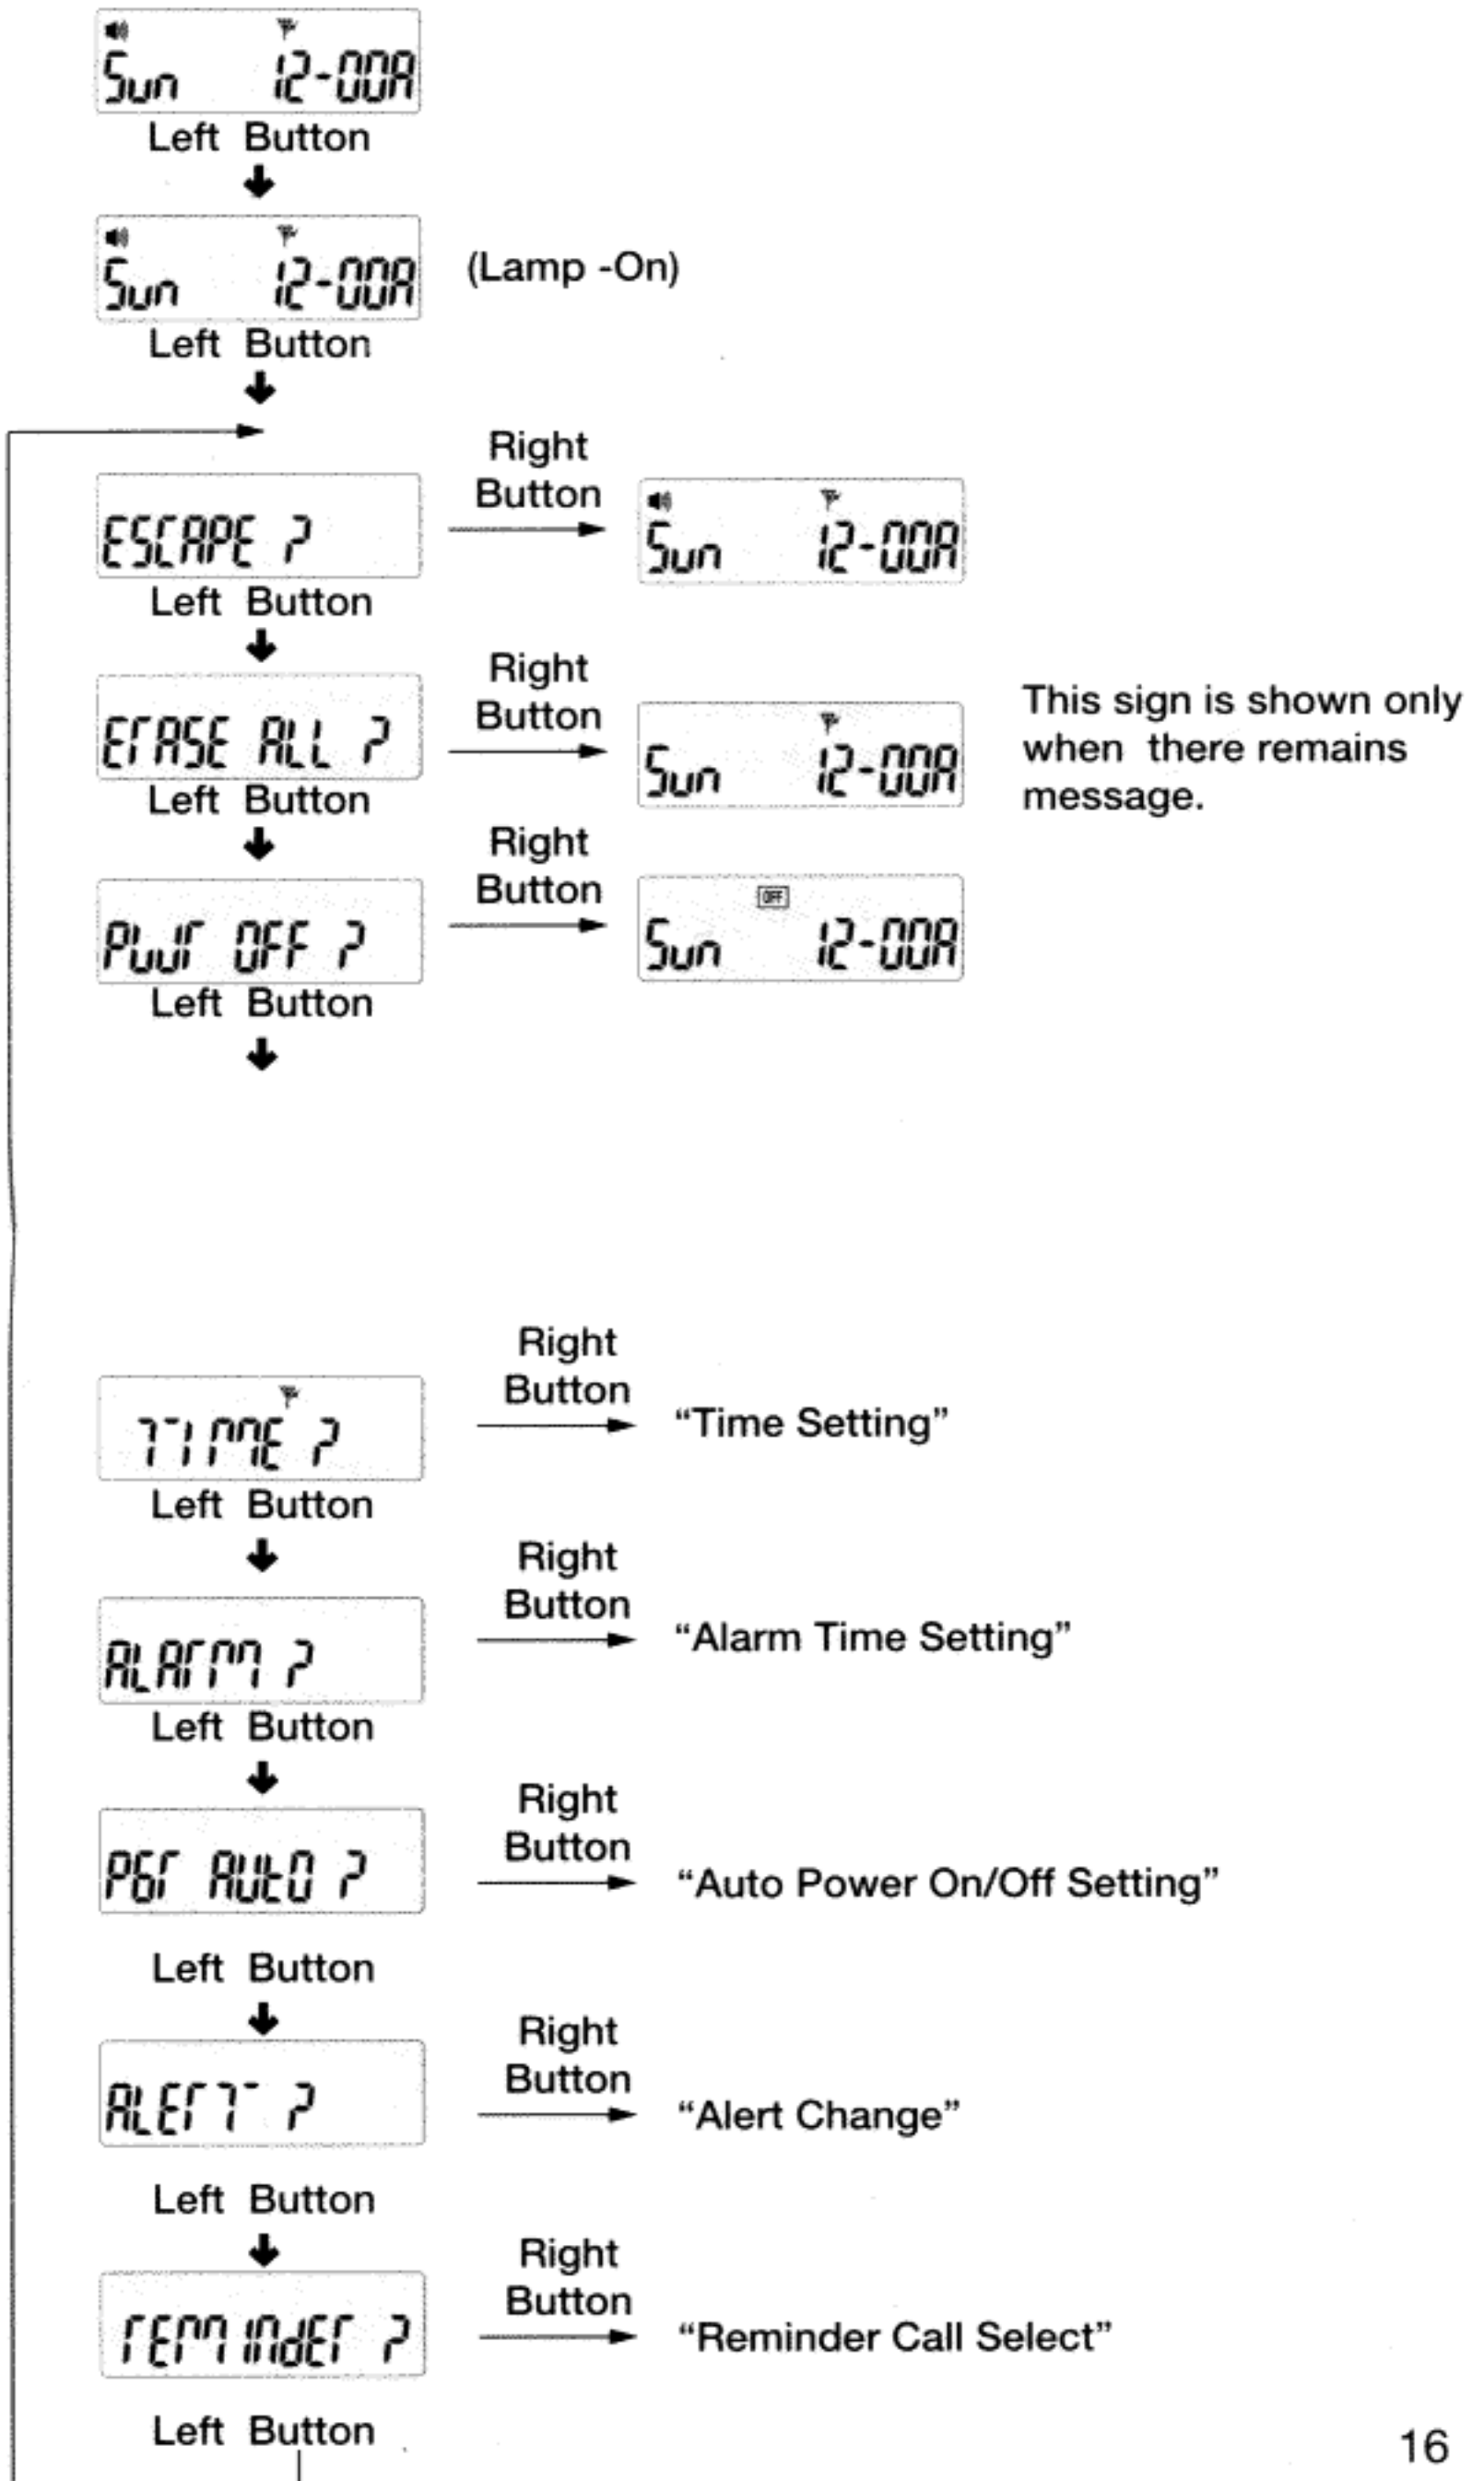- ① Press any button to stop the alert.
- ② Press  button to display the day and time of the day that message is received and the message slot number.
- ③ Press  button to display the received message.
- ④ Press  and  button simultaneously to return to the standby screen.




Messages longer than 12 characters display on a second screen, indicated by symbol . Press  button to display the second screen. The message displays automatically returns to the standby mode after 14 seconds, if  button is not pressed.

If a message is not read, the pager shows "Page" and number of unread messages on the screen until  button is pressed and all message are read.

If you enabled the reminder feature, pager chirps in every 4 minutes to alert you for unread message(S) until  button is pressed and all message are read.

If pager receives more messages than its available memory can hold, the new message replaces the oldest read and unprotected message and "INFO FULL" displays on the screen. Replaced messages are lost and not recoverable.




"Diva extra pager stores up to 20 personal messages in the memory. Reading time for each message is 14 seconds unless  button is pressed to advance to next received message, otherwise pager automatically returns to the stand-by mode in 14 seconds.


5-4. Setting the wake up message



This feature is for the user to program his own pager number so that user doesn't need to label the pager number on the pager. Wake up message displays every time pager powers up.

① Take the battery out from the battery compartment

② Press  button while reinserting the battery in to the compartment



③ Press  button to scroll the number from the first digit of the left side. Each segment consists of 1-9, hyphen and space

- ④ Press  button to change to the second digit flashes
- ⑤ Repeat the same to set all the digit
- ⑥ Press  to finish and returns to the standby mode.
- ⑦ Pager vibrates and alerts for 6 seconds while displaying wake up message on the LCD.



Tip: Customer who uses voice mail service from the paging service carriers is recommended to set the wake up message as same format as their voice mail message number transmitted from the carrier.

Typical format of voice mail message sent out by the most of the carriers in USA is 123-1234 so this case set the wake up message as 123-1234 and set the rest of the digits in blank. Pager displays "Mail Voice" for voice mail message.

5-5. Delete received message(s)





Received message can be deleted singly or all the unlocked messages at once.



Delete all messages

- ① Press  until "ERASE ALL?" displays.
- ② Press  to delete all read and unlocked messages. Pager returns to the standby mode with a long sound of chirp.

Note: Deleted messages are lost and not recoverable.

Delete single message

- ① Press  button until a message that you want to delete displays.
- ② Press  button to protect the message.
- ③ Press  button to unlock message.
- ④ Press  button again displays "ERASE?"


- ⑤ Press  button to delete, or else press  button to cancel deletes.



Pager returns to the standby mode with a long sound of chirp.

Note: Deleted messages are lost and not recoverable.

5-6. Locking and Unlocking the Message

 
Up to 10 messages can be locked in the memory, preventing them from being replaced when memory is full (indicated by the "INFO" message)

Press  button until the message you want to lock displays


Press  button to protect the message and symbol  displays at the top of the message

6 How to change the battery

Unlock the door by sliding the locking tab to unlock the door.

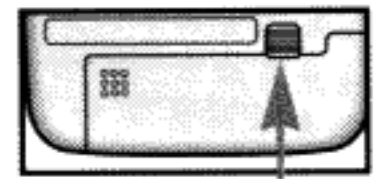


Open the battery door.

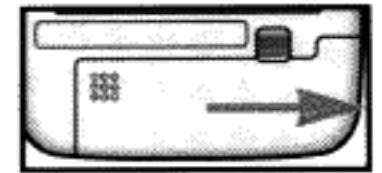 


Remove old battery.

 Install the battery by aligning to the positive and negative. Negative side goes into the inside compartment towards the spring.

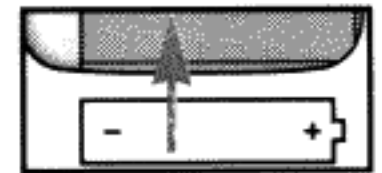

Close the battery door.

 Lock the door by sliding the locking tab.

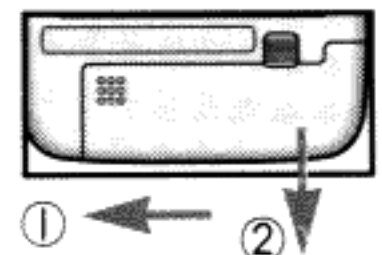

7 Battery Information

Diva extra pager is designed to operate with an AAA-size battery.

8 Precaution

Keep your pager from any kinds of liquids.

Do not throw or drop the pager.

Do not attempt to open the pager and modify the pager.

9 Repair and Maintenance

Diva extra Pager provides trouble-free quality for many years however, if service is ever needed, Diva Telecom service center staffs with specially trained engineers are available to provide warranty repair services.

10 Warranty

Diva extra ensures the best quality in wireless industry. However Diva extra is ever required for service, return the Diva extra with description of malfunctioning or difficulties along with the proof of purchase. (cash register receipt with purchase date required)

Warranty is 1 year from the date of purchase.

What's not covered by warranty:

Accident, physical damage, improper installation, misuse, fire, water and liquid intrusion, unauthorized modification, alteration are not covered by warranty.