

 
NUMERIC PAGER

USERS MANUAL







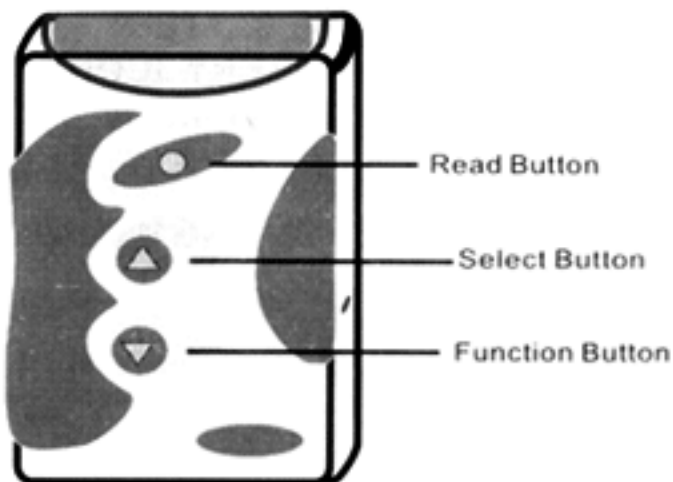



Feature

- ULTRA COMPACT SIZE
- 10ALERTS,SILENT (VIBRATION), BEEP
- DISPLAY TIME, DATE AND DAY OF THE WEEK
- DISPLAY NUMBERS OF UNREAD MESSAGES
- 16 MESSAGE MEMORY
- LOCK UP TO 10MESSAGES
- DETETE INDIVIDUAL OR ERASE ALL MESSAGES
- MSSAGE TIME STAMPING
- DUPLICATE MESSAGE INDICATOR
- 3 ALARM SETTING
- LOW BATTERY INDICATOR
- SERVICE AREA INDICATOR
- BACKLIGHT

 OUTLOOKING



PAGER SYMBOLS

-  UNMBERS OF MESSAGES STORED
-  UNREAD MESSAGE INDICATOR
-  REPEAT MESSAGE INDICATOR
-  LOW BATTERY INDICATOR
-  SERVICE AREA INDICATOR
-  LOCKED MESSAGE
-  ALARM CLOCK
-  AUTO ON/OFF
-  STANDARD BEEP
-  VIBRATOR

STAND-BY MODE



03:25 01-01
SU ▽ 🔊

STANDBY MODE IS THE HOME SCREEN OF THE PAGER. IT DISPLAYS THE TIME ,DATE AND DAY OF THE WEEK

SET ALERT

FROM STAND-BY MODE, RPRESS FUNCTION KEY THE SCREEN WILL THEN DISPLAY AS BELOW



SET ALERT? ▽ 🔊

PRESS SHIFT KEY TO ENTER SET ALERT MODE, PRESS FUNCTION KEY SELECT ALERT TYPE, PRESS READ BUTTON TO RETURN TO STAND BY MODE

 
SET ALERT TYPE

FROM STAND-BY MODE ,PRESS FUNCTION KEY THE SCREEN WILL THEN DISPLAY AS BELOW



SET ALARM? ▽ 🔊

PRESS FUNCTION BUTTON AGAIN, THE SCREEN WILL THEN DISPLAY AS BELOW

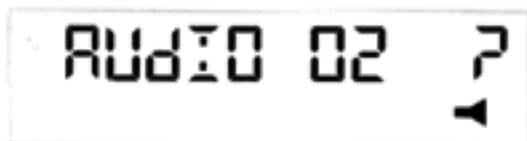

PRESS FUNCTION BUTTON TO SELECT ALERTY TYPE YOU PREFER, PRESS READ BUTTON TO CONFIRM SETTING & RETURN TO STAND-BY MODE

SET ALARM

PRESS FUNCTION KEY TWO TIMES. THE SCREEN WILL THE DISPLAY AS BELOW



PRESS FUNCTION KEY TWO TIMES. THE SCREEN WILL THE DISPLAY AS BELOW



1:1ST SET OF ALARM CLOCK

ON/ -- : ON : ENABLE ALARM CLOCK
-- : DISABLE ALARM CLOCK

 
00:00 - HOUR & MINUTES SETTING

PRESS SHIFT KEY TO MOVE CURSOR,
PRESS FUNCTION KEY TO ADJUST DATA
PRESS READ KEY TO RETURN TO STAND-
BY MODE

AUTO ON/OFF SETTING

PRESS FUNCTION KEY UNTIL THE SCREEN
DISPLAYS SET AUTO Y

PRESS SHIFT KEY,THE SCREEN WILL
THEN DISPLAY AS BELOW

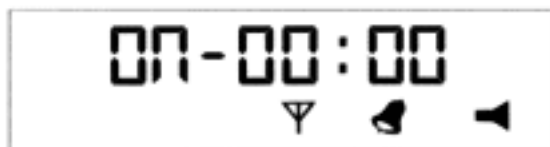

ON -00:00 -AUTO ON TIME

OFF -00:00 -AUTO OFF TIME

PRESS SHIFT KEY TO MOVE CURSOR,
PRESS FUNCTION KEY TO CHANGE
DATA ,PRESS READ KEY TO RETURN
TO STAND-BY MODE

 
NOTE : THIS FEATURE WILL TURN YOUR
PAGER ON AND OFF ACCORDING
TO THE
Them THAT IS SET, MESSAGES
WILL NOT BE RECEIVED WHILE
THIS FEATURE IS IN USE.

PAGER OFF SETTING

PRESS FUNCTION KEY UNTIL THE SCREEN DISPLAYS PAGE OFF, PRESS SHIFT KEY TO TURN PAGER OFF. PRESS READ BUTTON TO TURN PAGER BACK ON

SET TIME

PRESS FUNCTION KEY UNTIL THE SCREEN DISPLAYS SET TIME, PRESS SHIFT KEY THE SCREEN WILL DISPLAY AS BELOW

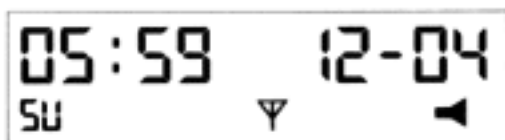

05 - HOUR

59 - MINUTES

12 - DAY OF MONTH

04 - MONTH

SU - WEEKDAY

12/24 HOURS DISPLAY SETTING

PRESS SHIFT KEY UNDER SET TIME SCREEN UNTIL THE SCREEN DISPLAYS



PRESS FUNCTION BUTTON TO SELECT 24 HOURS OR 12 HOURS DISPLAY SETTING,

PRESS READ BUTTON TO CONFIRM
SETTING & RETURN TO STAND-BY MODE

READ MESSAGE

PRESS ANY KEY TO STOP ALERT, PRESS
READ KEY TO READ MESSAGE, PRESS
READ KEY TO VIEW THE NEXT SCREEN

LOCK/UNLOCK DELETE INDIVIDUAL MESSAGE

1. PRESS READ KEY TO SELECT THE
MESSAGE YOU WANT TO LOCK,
UNLOCK OR DELETE
2. PRESS FUNCTION KEY TO LOCK, UNLOCK
, OR DELETE MESSAGE
3. PRESS READ KEY TO CONFIRM YOUR
SELECTION

BACKLIGHT

TO TURN ON OR THE BACK LIGHT, PRESS
SHIFT KEY THE BACK LIGHT WILL
AUTOMATICALLY TURN ON/OFF

DELETE ALL MESSAGE

PRESS FUNCTION KEY UNTIL THE
SCREEN DISPLAY CLEAR ALL. THEN
PRESS SHIFT KEY TO DELETE ALL THE
UNLOCKED MESSAGES

REMINDER

- 1. PLEASE CHANGE THE BATTERY RIGHT AWAY WHEN LOW BATTERY ICON IS DISPLAYED, OR YOU MAY MISS MESSAGES**
- 2. DO NOT OPEN THE HOUSING WITHOUT ALLOWANCE**