

READING MESSAGE

A message can be checked by pressing the ► key. If there is no message, the "NO PAGE" appears on the LCD.

Key function during message display are as follows:


► - Pressing this key will show the newest message first. Message No. & time stamp will appear on the first half of this message.

Pressing the key again will show the rest of the message.

● - Returns from [Message Display] screen to [Power On] status.

When a message received is over 13 digits, it is divided into the following two displays.

- First Half of the Message

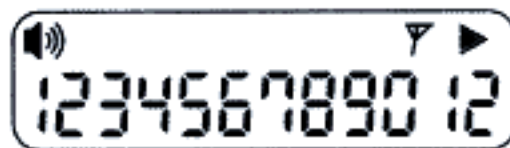

- Second Half of the Message



PROTECTING MESSAGE

The pager can store up to 12 messages. The symbol (🔒) will identify all "protected" messages. They will not be overwritten by new incoming messages. (Note : Protected messages will be deleted while replacing the battery.)

To protect message, read the message you want to protect and press hold the ► key, then press ● to store the message in memory.

The protect symbol (🔒) will appear on the LCD

To reset protection of the protected message, press ● while pressing the ► key again.

If you protect any message when 12 messages have already been protected, the "LoC_FULL" appears on the LCD for 1 second.

ERASING ALL UNPROTECTED MESSAGE

All unprotected messages can be deleted at one time. To erase all message, press the ● key four times and "ERASE ALL ?" is displayed on the LCD. Press ► to delete all unprotected messages.

(Note : Doing this function will not erase all protected messages.)

ALARM FUNCTION

When the alarm is on, the alarm will beep for 15 seconds when the set alarm time is reached.

To stop the alarm, press either the ● key or the ► key.

- Alarm Setting

From the [Power On] mode, press the ● key 2 times and the "SET ALARM ?" is displayed on the LCD. Then press ► to change the time. When the ► key is pressed, the screen displays the time and the hour is blinking.

Set the current hour by pressing the ► key.

After setting the hour, press ● and the 10-minute is blinking. Press ► to set the 10-minute first. Repeat to set 1-minute & AM/PM.


When the alarm setting is finished, press ● and the screen return to the [Power On] status.

BATTERY LOW WARNING



While the battery power nears to the low level, the screen displays "BATT LOW" and the battery low warning symbol (🔋) starts blinking. At this time, replace your battery.

ZOOM COMMUNICATIONS

Miracle numeric display pager
TP-1000N

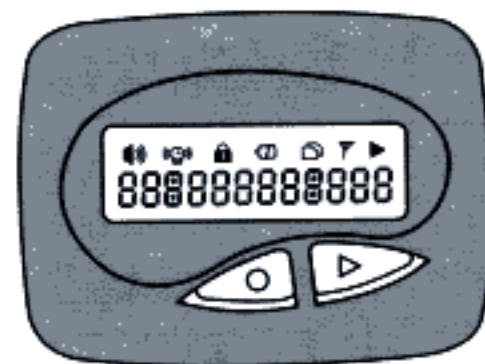

EXTERNAL VIEW

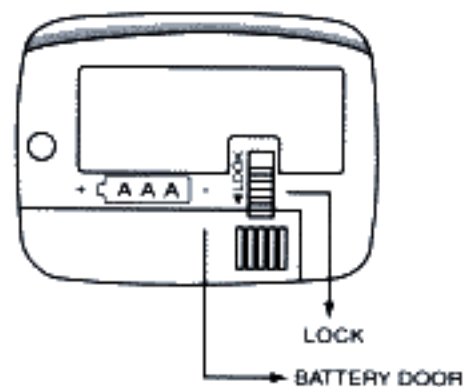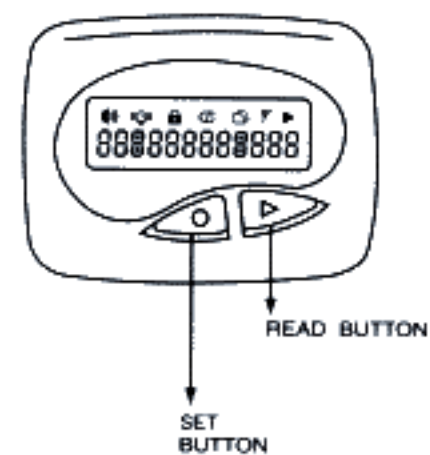

PAGER DISPLAY SPECIFICATIONS



- 1. Alarm Setup Symbol**
 This symbol indicates that the alarm is "on" and will beep at designated time.
- 2. Calling Mode Setup Symbol**
 This symbol indicates that the pager is in beep mode. Goes out when it is set to the vibration mode.
- 3. Message Protection Symbol**
 This symbol indicates that the message is saved in a unique permanent memory.
- 4. Battery Low Warning Symbol**
 This symbol indicates that the battery power nears low level.
- 5. Duplicate Message Reception Symbol**
 This symbol indicates the incoming message received is a duplicate of an unprotected message.

- 6. Message Receiving Area Display Symbol**
 This symbol indicates that the pager is within range to receive a page (Note : This feature is not available in all area).
- 7. Continuous Message Display Symbol**
 This symbol indicates that the received message is more than 13 digits.

POWER ON / OFF MODE

From power off mode, hold either keys for about 2 seconds and the LCD displays the power up screen. When the ● key is pressed 3 times, the "POWER OFF ?" screen is displayed on the LCD. Press ► and the screen changed to "OFF" mode. In the [Power Off] mode, the pager will not received any messages.

ALERT MODE SETUP

The [Tone] or [Vibrator] mode can be changed over in the [Alert Setup] mode.

• Selecting an Audible Alert
From [Vibration] mode, press ●, the display changes to set "TONE ?" screen. Press ► and selected tone will be played with Tone No. Press ● to set the desired tone.

RECEIVING MESSAGES

When a message is received, the pager either vibrates or beeps and the message is displayed on the LCD screen for 10 seconds. To stop the alert press any key. Press ► to continue reading the message.

If there is any message that has not been read, the screen displays the number of unread message. If there is any duplicate message, the [Duplicate Message] symbol appears on the LCD.

SETTING THE TIME

From the [Power On] mode, press ● 5 times and the "SET TIME ?" is displayed on the LCD. Then press ► to change the time.

When the ► key is pressed, the screen displays the time, and the hour is blinking. Set the current hour by pressing the ► key. After setting the hour, press ● and the 10-minute is blinking.

Press ● to set the 10-minute first. Repeat to set 1 minute & AM/PM. When the time setting is finished, press ● and the screen returns to the [Power On] mode.