 


USER'S MANUAL

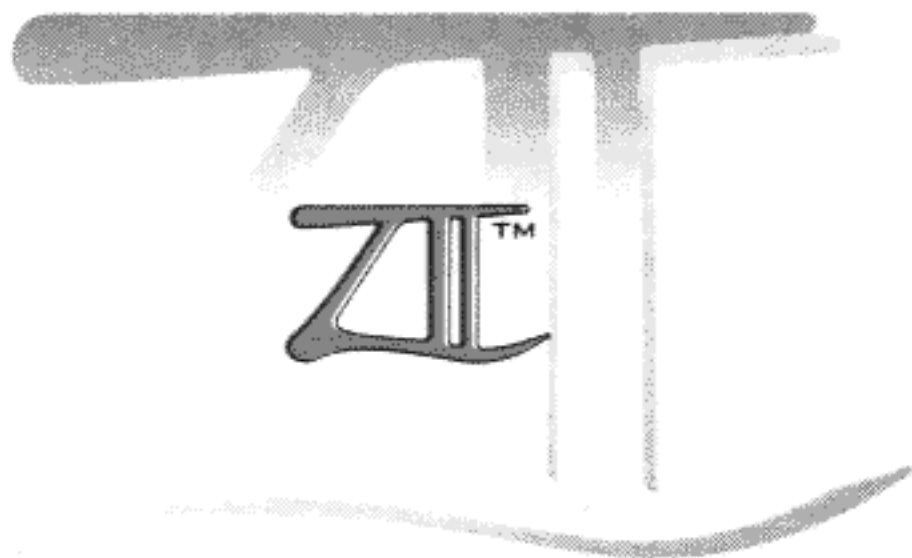

Numeric Pager

SUN TELECOM
INTERNATIONAL



Congratulations on your purchase of a ZILTM Pager. Your new pager will keep you in touch with everyone important instantly. The ZILTM pager is reliable and easy to use as well as affordable and provides many features that incorporates the most advanced electronic paging technologies. Please read this manual carefully before using your pager for better understanding of operation.

SUN TELECOM
INTERNATIONAL

CONTENTS


1. FEATURES	4
2. BUTTONS	5
3. ICONS AND DESCRIPTIONS	6
4. TURNING YOUR PAGER ON	7
5. TURNING YOUR PAGER OFF	8
6. RECEIVING AND READING MESSAGES	9
7. DUPLICATE MESSAGES	10
8. CHANGING THE ALERT STATUS	11
9. MEMORY CAPACITY	12
10. LOW BATTERY INDICATOR	12
11. LOCKING MESSAGES	13
12. DELETING MESSAGES	14
13. ALARM	16
14. TIME AND DATE	17
15. AUTOMATIC ON / OFF	18
16. LIGHT	19
17. BATTERY INFORMATION	19
18. CANNED MESSAGE	20


1. FEATURES


- ▶ 16 Message Memories
- ▶ 9 Locked Messages
- ▶ 8 Melodies
- ▶ 5 Beeps
- ▶ Vibrator
- ▶ Time Stamp
- ▶ Time/Date
- ▶ Alarm
- ▶ Automatic On/Off
- ▶ Light
- ▶ Deletion of All or Individual Messages
- ▶ In Range Indicator
- ▶ Low Battery Indicator
- ▶ Duplicate Message Indicator
- ▶ Unread Message Indicator
- ▶ Memory Full Indicator

(Specifications are subject to change without prior notice)

 2. BUTTONS

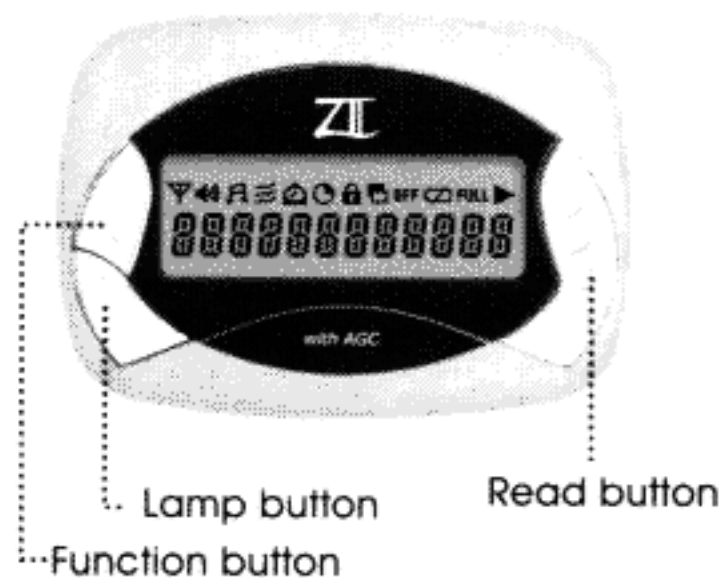











-  **FUNCTION BUTTON**
 - Enter into menu mode
 - Turn Pager on


-  **LAMP BUTTON**
 - Turn the Light on or off
 - Exit from menu mode

-  **READ BUTTON**
 - Read Messages
 - Select settings and features

3. *ICONS AND DESCRIPTIONS*

- | | |
|---|---|
|  : Reception Area |  : Message Lock |
|  : Alert (Beep) on |  : Duplicate Message |
|  : Alert (Melody) on | OFF : Pager Off |
|  : Alert (Vibrator) on |  : Change Battery |
|  : Alarm on | FULL : Message Full |
|  : Auto pager off |  : Message longer than 12 Char |

 4. *TURNING YOUR PAGER ON*

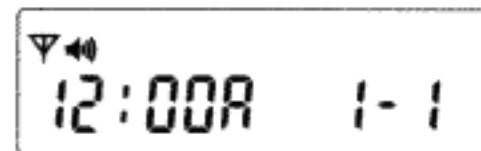

< Stand by Mode >

Press the function button for 2 seconds or longer while pager is in the Off mode. Time and date will appear in the bottom center of the screen.

Upon inserting a battery, pager will vibrate and beep briefly as it enters the normal reception mode.

5. TURNING YOUR PAGER OFF

A rectangular box representing a pager screen. In the top left corner, there is a small speaker icon with a downward arrow. The main display area shows the text "POWER OFF ?" in a large, blocky font.

Press the function button for 2 seconds or longer to enter the menu mode.

Pager will beep once and "SET ALERT ?" will be displayed.

A rectangular box representing a pager screen. In the top left corner, there is a small speaker icon with a downward arrow. The main display area shows the time "12:00A" and the number "1-1" in a large, blocky font. In the top right corner, the word "OFF" is displayed in a smaller font.

Press the function button once more and "POWER OFF ?" will be displayed.

Then press the read button to turn off pager.

"OFF" sign will appear in the top right corner of the screen.

6. RECEIVING AND READING

MESSAGES

A rectangular box representing a pager screen. In the top left corner, there is a small speaker icon with a downward arrow. The main display area shows the text "01 PAGES" in a large, blocky font.

When a message is received, the selected alert (one of 8 melodies/5 beeps or vibrator) will be activated.

Press the read button to stop the alert and read messages. The following will be displayed in the order of the newest to the oldest message: Message number, time stamp, and message.

A rectangular box representing a pager screen. In the top left corner, there is a small speaker icon with a downward arrow. The main display area shows the message number "013" and the time stamp "12:00A" in a large, blocky font.

A rectangular box representing a pager screen. In the top left corner, there is a small speaker icon with a downward arrow. The main display area shows the message "012345678908" in a large, blocky font. A right-pointing arrow is located in the top right corner of the screen.

 
Reading Messages with 13 Characters or More

Messages with 13 or more characters will display "▶" At the top right corner of the screen.

Press the read button to read the rest of the message.

A rectangular box representing a pager screen. In the top left corner, there is a small speaker icon with a downward arrow. The main display area shows the number "2" in a large, blocky font. A right-pointing arrow is located in the top right corner of the screen.


Reading Locked Messages

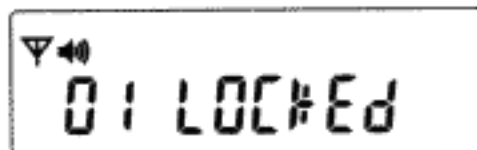

01 LOCKED

In order to read locked messages, there must be no unread messages.

 
Press the function button to enter into the locked message read mode.

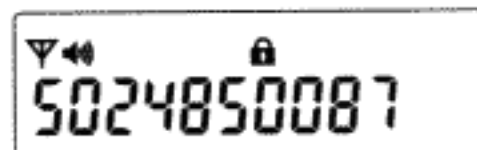

5024850087

Press the read button to display and read locked messages.

 
7. DUPLICATE MESSAGE

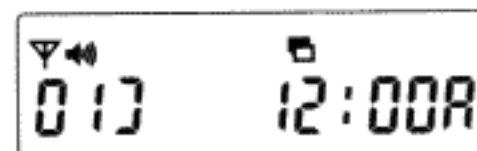

013 12:00A

Duplicate message indicator will be displayed on the screen when the pager receives a message that is identical to a message in memory.

 8. CHANGING THE ALERT STATUS

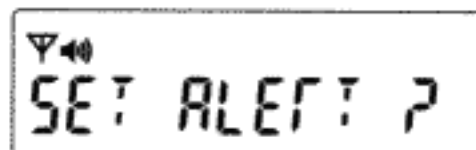

SET ALERT ?


Press the function button for 2 seconds or longer to enter into the menu mode.

Pager will beep once and "SET ALERT ?" will be displayed.




BEEP 1

 Press the read button to select the set alert mode. Each press of the function button in the set alert mode will activate, in order, vibrator, 5 beeps and 8 melodies.

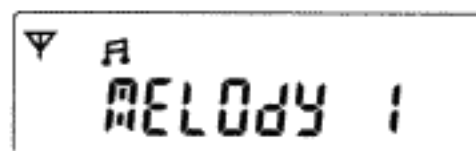

MELODY 1

 Press the read button to make selection while the desired alert is displayed.

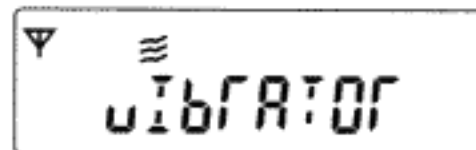


VIBRATOR

9. MEMORY CAPACITY



Pager has a memory capacity to store 16 numeric messages.

 10. LOW BATTERY INDICATOR

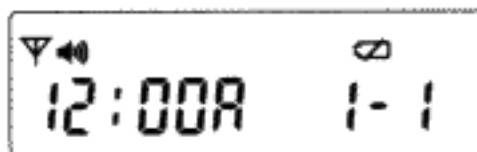


When the battery capacity falls below the operational level, the low battery icon will be displayed and the voltage alarm tone will be activated.

  11. LOCKING MESSAGES

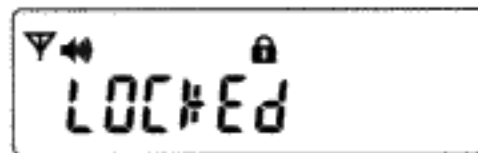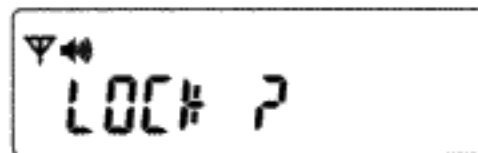

A maximum of 9 messages can be locked. Select a message to be locked and press the function button. When "**Lock ?**" is displayed, press the read button to lock the message. "**Locked ?**" and its icon will be displayed.

 12. DELETING MESSAGE



▽◀ 01 LOCKED

Individual Deletion:

To delete a locked message, press the function button while the message is displayed.

When "Delete?" appears, press the read button. "Deleted" will be displayed upon completion.



▽◀ 5024850087 ▶



 
▽◀ DELETE?

To delete an unlocked message, press the function button twice while the message is displayed.

Press the read button to delete the message when "Delete?" appears.




▽◀ DELETED



▽◀ DELETE ALL?



 ▽◀ GENERAL?



▽◀ REALLY?



▽◀ LOCKED?

Deletion of All Messages:

Forward to "Delete All?" mode by pressing the function button in the menu mode. (rf. Sections 2 and 5)

Press the read button while "Delete All?" is displayed.

"General?" will appear, at which time press the read button to display "Really?".

Press the read button again to delete all unlocked messages.

To delete all locked messages, press the function button while "Delete All?" is displayed.

"Locked?" will be displayed.

Press the read button to bring up "Really?" and press the read button again to delete all locked messages.

 
13. ALARM



▽⏪
SET ALARM ?


Forward to "SET ALARM ?" by pressing the function button in the menu mode. (rf. Sections 2 and 5)

Press the read button to select the set alarm mode.

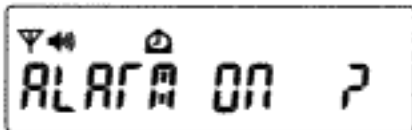

▽⏪ ⊕
ALARM ON ?

 Press the function button to toggle between Alarm On and Off. Press the read button while "ALARM ON ?" is displayed with the time blinking.

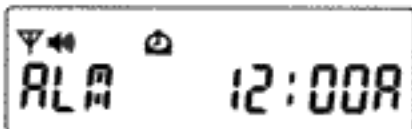


▽⏪ ⊕
ALM 12:00A

Press the function button to change hour, then press the read button to move to the next field.

Press the function button to change minutes.

 14. TIME AND DATE

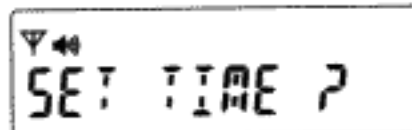

▽⏪
SET TIME ?

Forward to "SET TIME ?" by pressing the function button in the menu mode. (rf. Sections 2 and 5)

Press the read button to select the set time mode.

Press the function button to change month, then press the Read button to move to the next field.

Follow the same procedure to set time.

15. AUTOMATIC ON/OFF

▽⏏
SET AUTO ?

▽⏏
AUTO ON ?

▽⏏
ON 05:00A

▽⏏
AUTO OFF ?

To Enable Automatic On

1. From the function menu press the function button.
2. Press the read button until "AUTO ON/OFF ?" is displayed.
3. Press and release the function button until "AUTO ON ?" is displayed and then press the read button.
4. Press the function button to adjust the hour digit.
5. Press the read button to move the cursor to the hour digit.
6. Repeat steps 4 and 5 to adjust the on and off time setting.
7. Press the read button to activate your selection.

To Disable Automatic On

1. From the function menu press the function button.
2. Press the read button until "AUTO ON/OFF ?" is displayed.
3. Press and release the function button until "AUTO OFF ?" is displayed.
4. Press the read button to activate your selection.

Note: Factory default is 01:00AM ~ 05:00AM.

16. LIGHT

Press Lamp button to turn the Light on and press it again to turn the Light off.

17. BATTERY INFORMATION

The pager is designed to operate with a "AAA" size alkaline battery.

Note : Do not use carbon zinc batteries.

18. CANNED MESSAGE

▼**
HONEY

▼**
FRIEND

▼**
LOVE YOU

The ZII pager comes with 7 preprogrammed messages, which will be displayed on the LCD when the corresponding code is entered.

To send a canned message.

1. Dial the pager number on a telephone and wait for a beep sound.
2. Enter the number from 1 to 7.

▼**
HOME

▼**
OFFICE

▼**
GOOD JOB

▼**
URGENT

Following is the list of preprogrammed canned message.

CODE	Displayed Message	MELODY
1	Honey	Today
2	Friend	Die Forelle
3	Love you	Hymne a l'Amour
4	Home	Sting
5	Office	Doremi song
6	Good job	Congratulation
7	Urgent	Siren